

# FORM FIT HOOD PROTECTOR

Nissan Altima 2010-2011

HD 13A 09

## HARDWARE KIT

- 3 – Adhesive Backed Pedestals
- 5 – Push Type Retainers
- 2 – Protector Supporting Clips
- 2 – Alcohol Wiping Pads
- 2 – 3M Adhesive Promoter

## TOOLS REQUIRED

- 1 – Phillips Screwdriver # 2
- 1 – Tape Measure
- 1 – Masking Tape



1. Ensure the hood is clean and dry inside and out. Release the hood, but do not open it.
2. Dry fit the three (3) adhesive backed pedestals using masking tape to hold them in position. The first location is at the center of the hood parallel with the edge of the hood. The second and the third locations are 320mm to the left and right of the center mark, parallel with the edge of the hood.
3. Place the hood protector on top of the adhesive backed pedestals.
4. Confirm alignment and make any required adjustments of adhesive backed pedestals.
5. Remove protector, and using masking tape mark the perimeters of the adhesive backed pedestals. Remove pedestals and wipe area with alcohol pad. After the Alcohol has dried, apply Adhesive Promoter to the mounting area. Follow the instructions on the promoter for use. Allow the adhesive promoter to dry.
6. Remove the protective backing from the pedestals and place them accurately in the areas outlined with masking tape. After placing, remove masking tape and “wet out” tape to the hood surface by applying pressure with your thumb around the surface of the pedestals. Clean any residue from Adhesive Promoter with alcohol wiping pad.
7. Position the hood protector over the adhesive backed pedestals aligning the holes in the protector with the square holes in the pedestals. Insert a “push type retainer” through the hole in the protector, and into the pedestal. Ensure the protector is well seated against the surface of the pedestal and push the center pin of the retainer assembly to lock it into place. See illustration #1.

**Note: Engaging the center pin of the “push type retainer” is best accomplished by placing a #2 Philips drive screwdriver into the recess of the center pin. Use a light force or tap on the end of the screwdriver to seat the pin into the retainer. The retainer can be removed by unthreading the center pin in the conventional manner with a Philips screwdriver, however initial or subsequent placement is best performed using the “push” method described above.**


8. Place the supporting clips (side location), over the edge of the hood and align the clip hole with the hole in the protector. Using the same technique as in step #7, insert push type retainer through the protector and into the supporting clip.

**Note: Do not pull on the protector when opening or closing the hood.**

## CARE INSTRUCTIONS

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically check to make sure the bumpons are in place and the protector is secure. Avoid using automatic car washes. Do not pull on protector when opening or closing the hood.

## Illustration #1 – Pedestal Placements

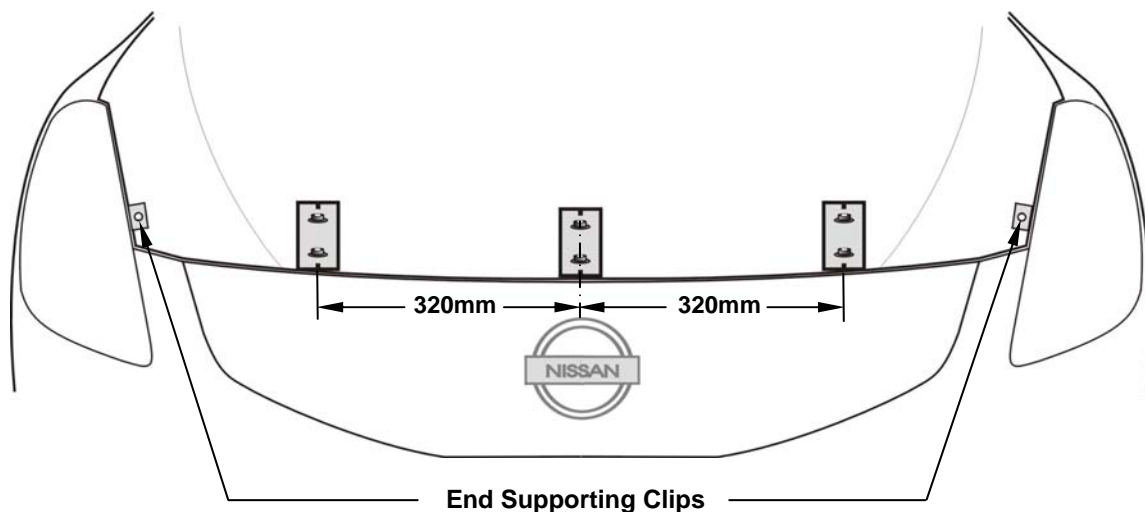

Thank you for purchasing a FORM FIT hood protector. Retain this sheet for care instructions and kit information.

Made in Canada

Rev0.101118