

FORM FIT HOOD PROTECTOR

Chevrolet Optra ⑤ 2004 - 2007

HD 5V 04

Hardware Kit

- | | |
|--------------------------------|---------------------------------|
| 3 – Large Bumpons | 4 – Pins |
| 2 – S Clips | 4 – # 6 x 5/8" Flat Head Screws |
| 4 – 3M Anti-abrasion Film Pads | 4 – 'L' Brackets |
| 4 – Clip Bodies | |

Tools Required

- | |
|-----------------------------|
| 1 – Tape Measure |
| 1 – Phillips Screwdriver #2 |



Installation

1. Be sure that the hood is clean and dry inside and out. Open the hood of the vehicle.
2. Install the bumpons as shown in *Illustration #3*. **Attention: The bumpons must be installed on the hood, not on the protector!!!** If the bumpons are installed on the protector, they will wear through the paint.
3. Install the "S" clips into the notches on the center-mounting flange of the protector as shown in *Illustration #1*. Be sure to orientate the "S" clips correctly, the smooth inner surface goes on the protector, the other side of the clip with flexible fins goes on the hood.
4. Position the protector (with "S" clip installed) on the hood and push the "S" clip over the leading edge of the hood until they fully seat on the hood edge. See *Illustration #2*.
5. With protector centered on the hood, peel and fold an anti-abrasion film pad in half over the edge of the hood, underneath each of the two (2) inner holes in the protector. See *Illustrations #4 – Step #5*.
- 6.a) Place a clip over each of the anti-abrasion film pads on the edge of the hood as shown below in *Illustration #4 – Step #6a*.
b) Insert a pin through the protector into each of the clips. See *Illustration #4 – Step #6b*.
c) Insert a #6 x 5/8" screw through an 'L'- bracket and into the clip. See *Illustration #4 – Step #6c & 6d*.
d) Make sure all the components are well seated together, the protector is centered on the hood, and then tighten the screws into the clips.
7. **Repeat steps #5 & #6, for the other two (2) holes.**
8. On some vehicles it may be necessary to adjust the hood bumpers and/or latch for proper clearance.
Note: Do not pull on the protector when opening or closing the hood.

Care Instruction

Clean the protector with a mild soap and water solution or plastic cleaner only. Do not use chemicals or solvents. Periodically checks to make sure that the bumpons are in place and that the protector is secure. Avoid using automatic car washes. Do not pull on the protector when opening or closing the hood.

Illustration #1: "S" Clip Installation on Protector

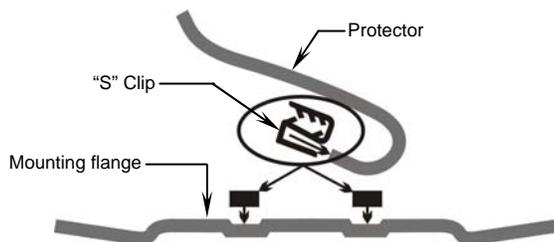


Illustration #2: S" Clip Placement on Hood

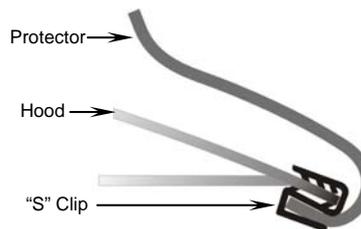


Illustration #3: Bumpon Placement


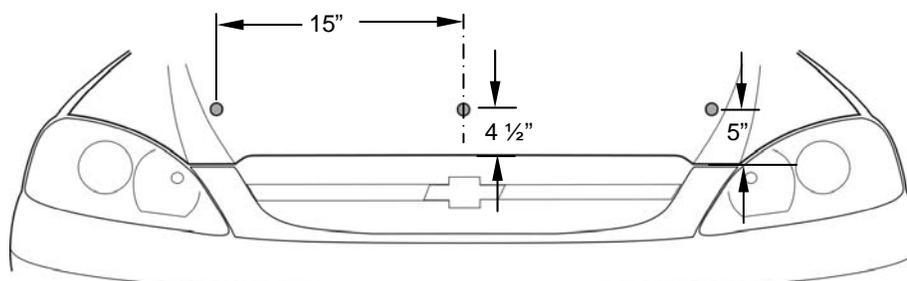


Illustration #4: Clip Configuration

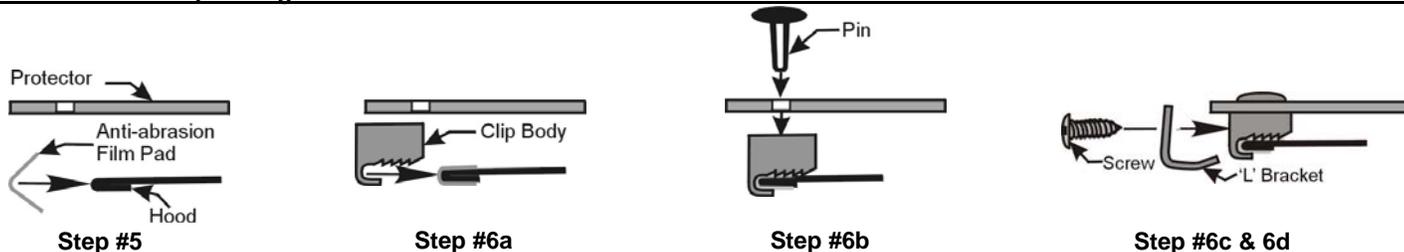

Thank you for purchasing a **FORM FIT** hood protector.
Retain this sheet for care instructions and kit information
Made in Canada
Rev1.100129

Sachet de fixation

- | | |
|------------------------------|--|
| 3 – Grosses Butées | 4 – Épingles noires |
| 2 – Agrafes « S » | 4 – Vis à têtes plate (n° 6 x 5/8 po.) |
| 4 – Tampons anti-abrasifs 3M | 4 – Braquets en forme « L » |
| 4 – Agrafes noires | |

Outils requis

- 1 – Ruban à mesure
1 – Tournevis à embout étoilé n°2



Installation

- S'assurer que le capot est propre et sec à l'intérieur comme à l'extérieur. Ouvrir le capot du véhicule.
- Installer les butées sur le capot tel qu'indiqué à l'illustration n° 3. **Attention : Les butées doivent être installées sur le capot et non sur le protecteur !!!** Si les butées sont installées sur le protecteur, elles useront la peinture.
- Installer les agrafes « S » à leurs propres positions sur la languette de montage du protecteur. Voir l'illustration n° 1. S'assurer que les agrafes « S » sont bien ranger; le côté sans les dents se glisse au-dessous de la languette, la côte avec les dents se glisse au-dessous de la bordure du capot.
- Centre le protecteur sur le capot, s'assurer que les agrafes « S » s'aligne avec la bordure du capot, puis poussez sur le protecteur pour glisser les agrafes « S » au-dessous de la bordure du capot. S'assurer qu'elles sont bien installées. Voir l'illustration n° 2.
- Peler et plier en deux les tampons anti-abrasifs sur la bordure avant du capot en dessous des (2) deux trous inférieurs. Voir l'illustration n°4 – étape n°5.
- a) Monter une agrafe sur chaque tampon anti-abrasif sur la bordure du capot. Voir l'illustration n°4 – étape n°6a.
b) Insérer une épingle au travers du protecteur et dans l'agrafe. Voir l'illustration n°4 – étape n°6b.
c) Insérer une vis (n°6 x 5/8 po.) au travers du braquet en forme «L» et dans l'agrafe. Voir l'illustration n°4 – étape n°6c et n°6d.
d) S'assurer que tous les composants sont bien installés sur le capot et serrer les vis dans les agrafes.
- Répéter les étapes n°5 et n°6 pour les autres trous.**
- Sur certains véhicules, il peut-être nécessaire d'ajuster les butées du capot et (ou) la fermeture du capot pour obtenir un bon dégagement.
Important: Ne jamais se servir du protecteur pour ouvrir ou fermer le capot.

Instruction pour l'entretien

Nettoyer le protecteur avec une solution faite d'eau et de savon doux ou avec un nettoyant de plastique seulement. Ne pas utiliser de produits chimiques ou de dissolvants. S'assurer périodiquement que les butées sont toujours en place et que le protecteur est toujours bien retenu. Éviter de laver le véhicule dans un lave-auto automatique. Ne pas tirer sur le protecteur pour ouvrir ou fermer le capot.

Illustration n°1: Emplacement d'agrafe «S» du protecteur

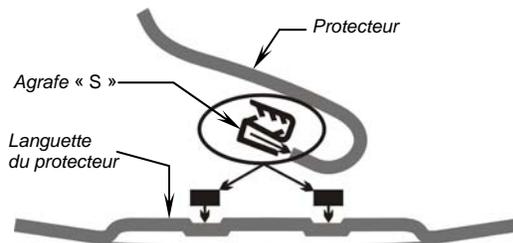


Illustration n°2: Emplacement d'agrafe «S» le capot

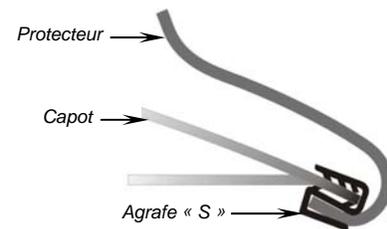


Illustration n°3: Emplacement des butées


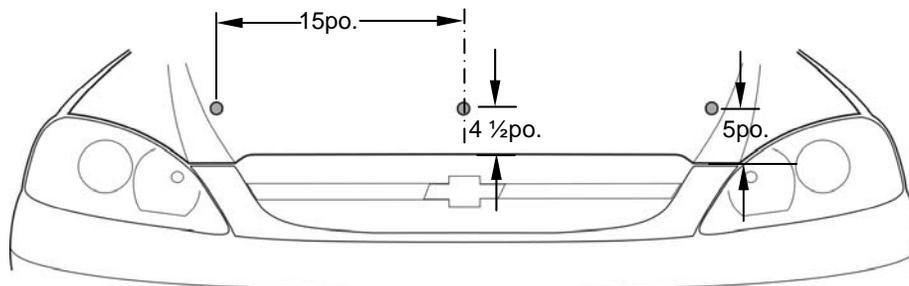


Illustration n°4: Configuration de l'agrafe

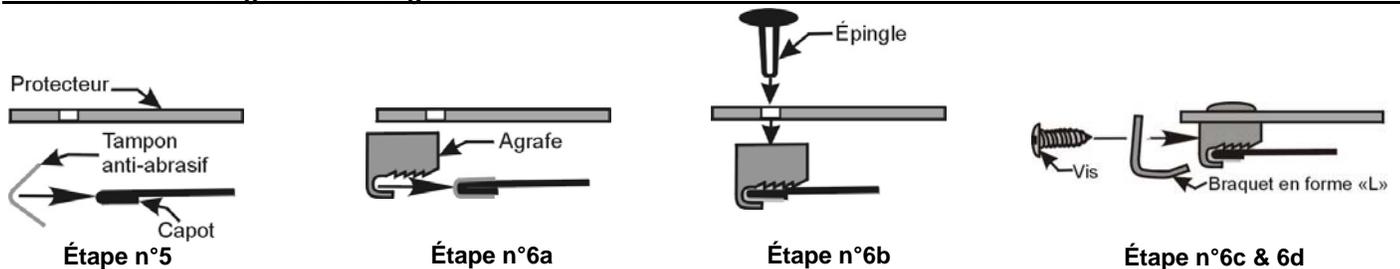

Merci de vous êtes procuré un protecteur **FORM FIL**.

Conserver cette feuille pour les instructions d'entretien et les renseignements concernant le nécessaire d'installation.

Fabriqué au Canada

Rev1.100129